

## ERROR: ELECTRICAL ASSISTANCE NOT OPERATING AT 25 KM/H (V2)

VALID FOR ALL MODELS

Problem setting the LCD screen.  
Possible cause: LCD screen incorrectly set.

### REQUIRED EQUIPMENT:

LCD Master screen.  
Wiring for LCD Master  
LCD parameters file

### - STEPS TO FOLLOW -

#### STEP 1:

Connect the master screen to the wiring and then connect the connection to the battery. If the master screen is already set up for the model you want, go on to step 3.  
If not, go on to step 2.




#### STEP 2:

You will need to set up the master LCD with the data written on the LCD settings file.

#### STEP 3:

Once the master LCD has been set up, you can connect the LCD screen to the system. Switch on both screens, then press the two arrows on the screen simultaneously. The message end copy will be displayed, so the settings are complete. You can now reconnect the screen to your bike.

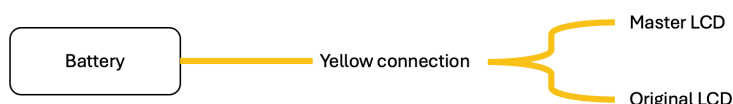

If the result does not improve contact the Eovolt after-sales service for an examination of the bike.